


REVISIONS			
REV	DESCRIPTION	DATE	REV BY
0	INITIAL ISSUE	10-14-05	TC

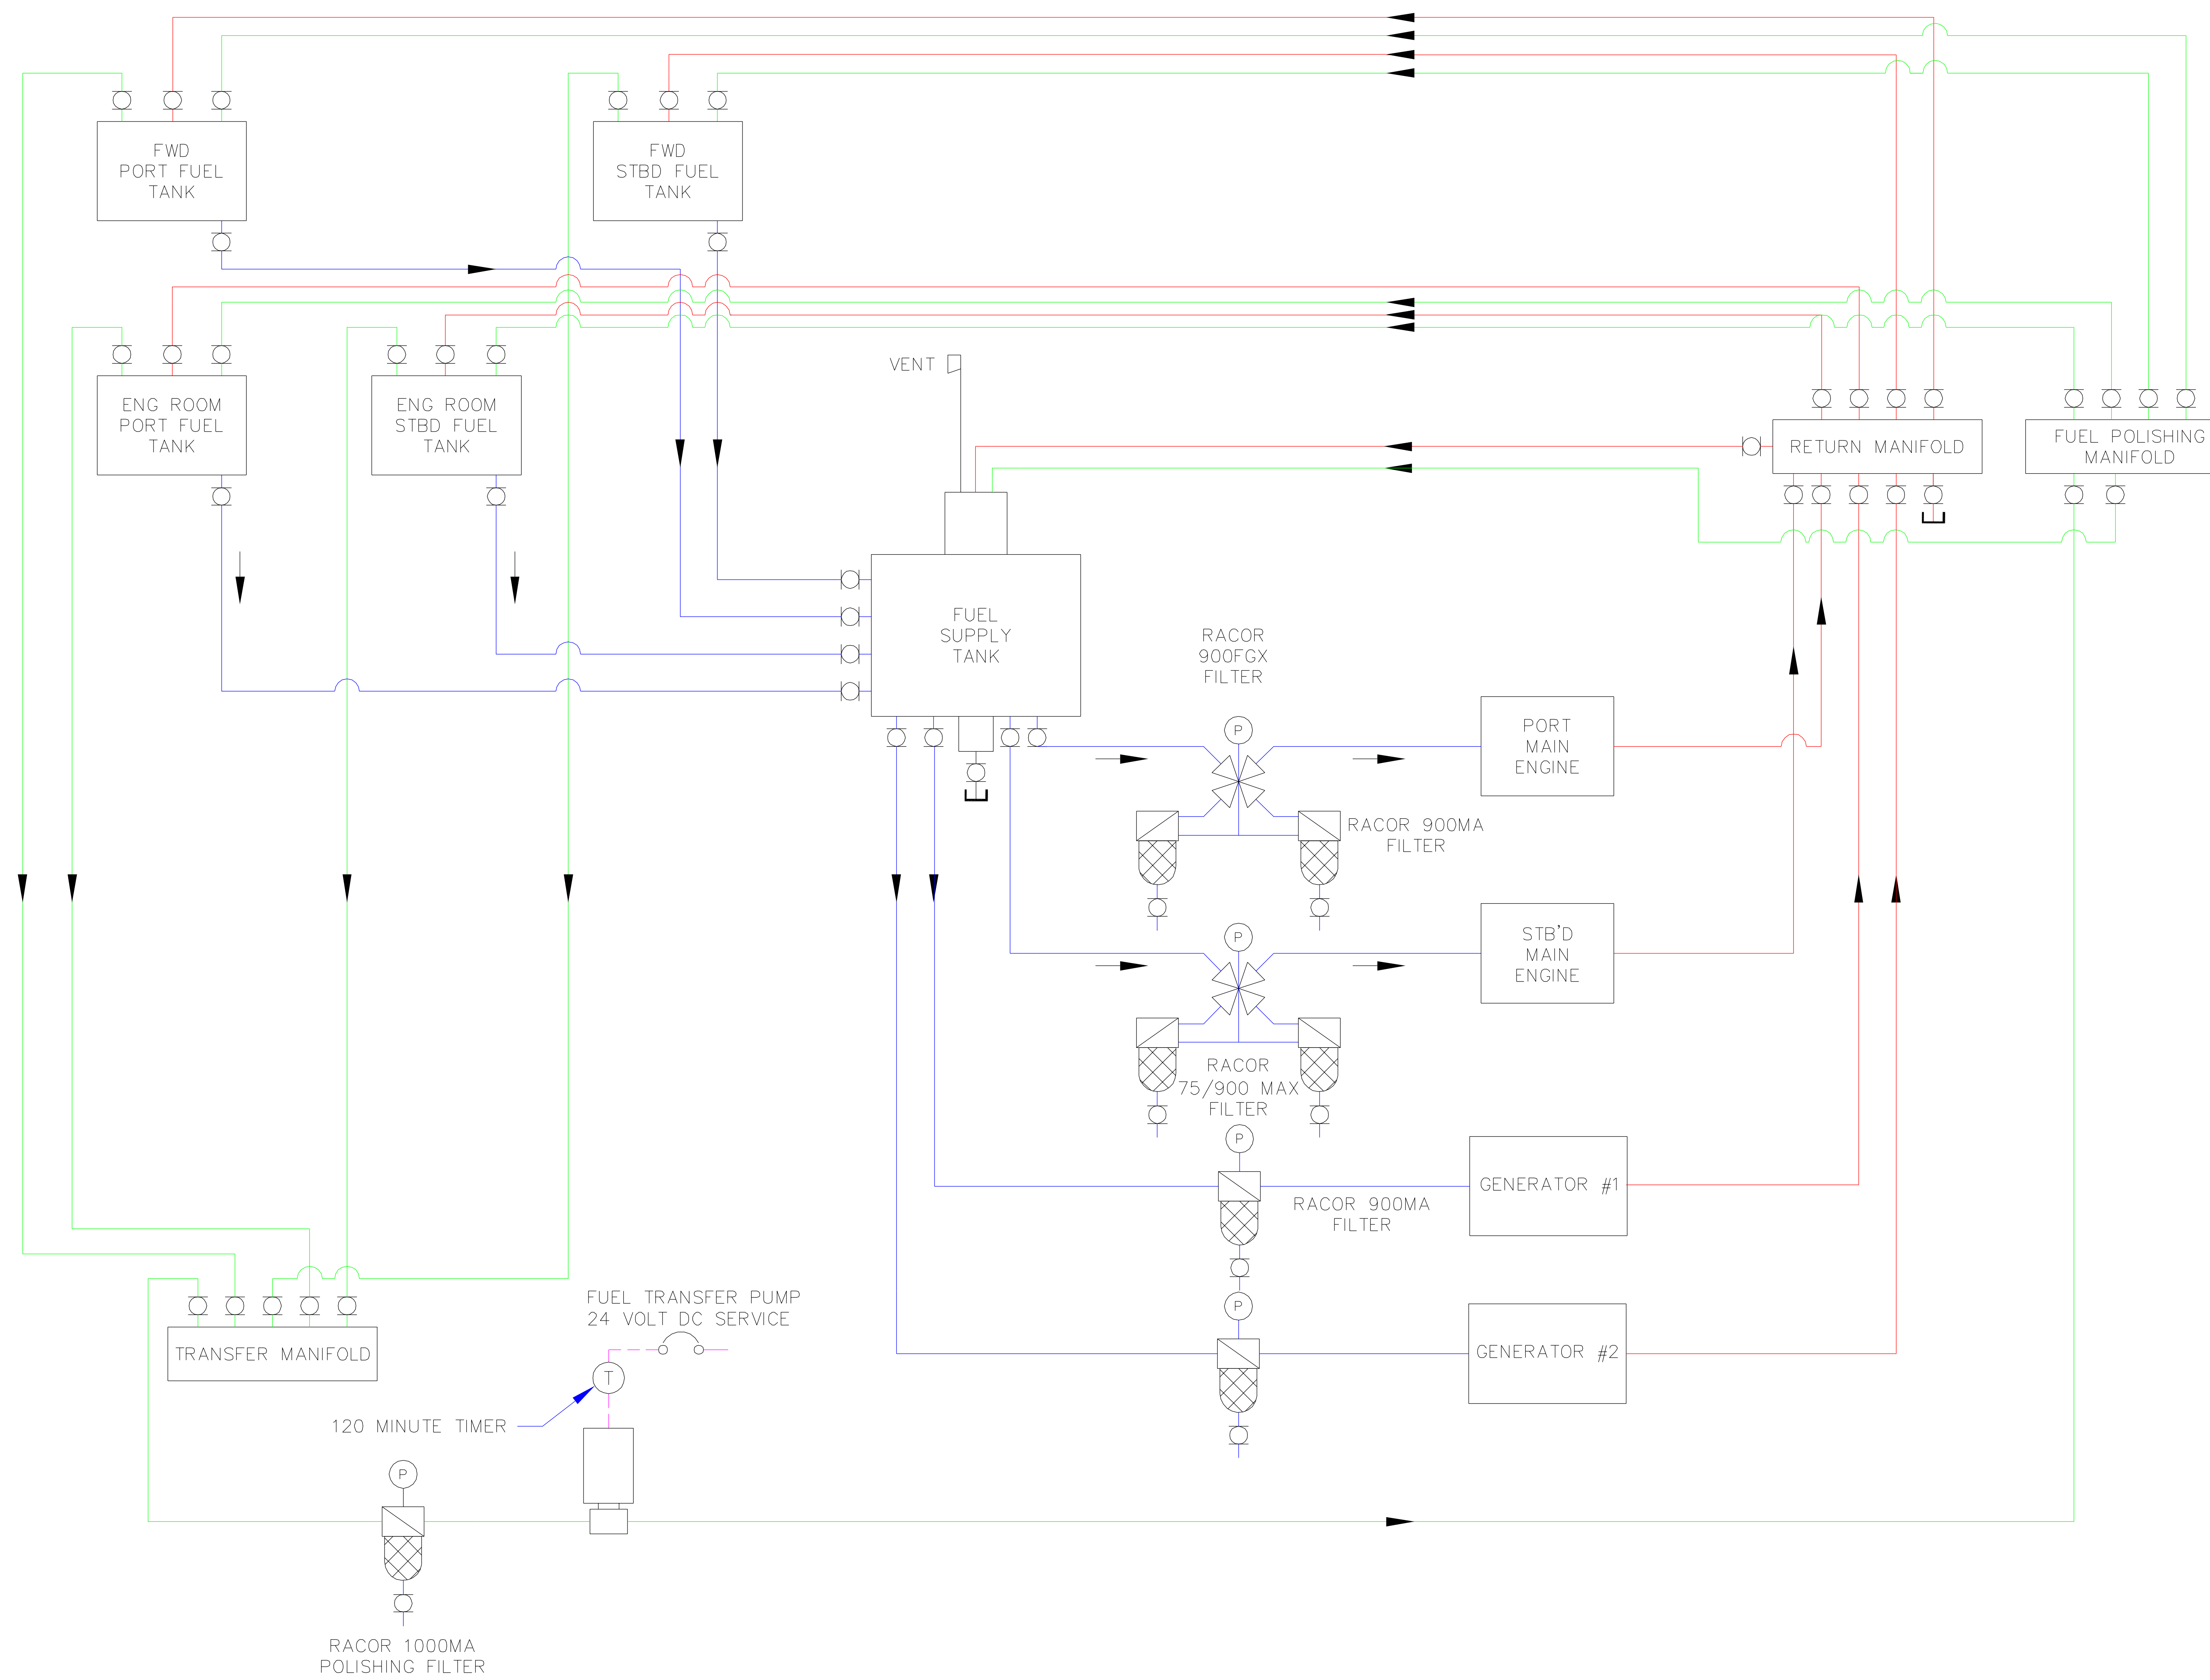

NOTES:

- TANK LEVEL SIGHT GLASS AND INTEGRAL VALVES ARE LOCATED ON BULKHEAD ON SIDE OF TANK (ENGINE ROOM TANKS ONLY).
- FUEL TANK MANIFOLDS ARE LOCATED ON FORWARD ENGINE ROOM BULKHEADS.
- FUEL TANK OUTLET CONNECTION TO SUPPLY TANK LOCATED JUST ABOVE THE BOTTOM OF THE TANK FOR MAXIMUM UTILIZATION OF FUEL.
- SUPPLY LINES = BLUE
RETURN LINES = RED
TRANSFER-POLISHING LINES = GREEN
- FUEL LINES:
FROM TANKS TO SUPPLY RESERVOIR = 1 1/2"
FROM SUPPLY RESERVOIR TO MAIN ENGINE = 3/4"
FROM SUPPLY RESERVOIR TO GENERATORS = 1/2"
VENT LINES = 1"

NORDHAVN 64 DIESEL FUEL SYSTEM

PACIFIC ASIAN ENTERPRISES
PO BOX 874, AT-THE HARBOR, DANA POINT, CALIFORNIA 92629
PH (949)496-4848 FAX (949)240-2398

SIZE B	PRJ. NO. N6805	DWG NO. N64DFS-6805	DWG. TC
SCALE: NTS	DATE: SEE ABOVE	REV: SEE ABOVE	SHEET: 1 OF 1